



# Cooling

## DAIKIN Temperature Control Operating Instructions

- Ensure thermostat is on by pressing the large power button located on the right side of the thermostat. A green light will emit from the button to indicate the thermostat is on.
- Using the button labeled “Mode” underneath the LCD screen, change the “Mode” to “Cool” or “Heat”. (Never set to “Auto”). The mode will display on the left side of the screen.
- Adjust the “Set Point” to your desired temperature using the red arrow and blue arrow buttons on the circle. The set point temperature is indicated on the right side of the screen, while the room temperature will in the center of the LCD screen.
- Adjust the “Set Point” to your desired temperature using the red arrow and blue arrow buttons on the circle. The set point temperature is indicated on the right side of the screen, while the room temperature will in the center of the LCD screen.
- A/C and heat flows from the vents mounted in the ceiling once the “Mode” and “Set Point” has been set, if the room isn’t already up to temperature.

*Please note the following:*

*The system will NOT run if the thermostats are calling for different modes. I.e., “Heat” in one room, and “Cool” in another. This only applies to the Daikin system and does not interfere with the hydronic baseboard heaters.*

*Thermostat will have a higher temperature reading than the “PRO” thermostat located to the right, as it has different temperature sensing technology.*