



Cooling

MITSUBISHI Temperature Control Operating Instructions

- Ensure thermostat is on by pressing the large power button located on the right side of the thermostat. A green light will emit from the button to indicate the thermostat is on.
- Using the blank rectangular buttons directly underneath the LCD screen, select the “Mode” to “Cool” or “Heat”. (Never set to “Auto”). The mode will display on the left side of the screen
- Adjust the “Set Point” to your desired temperature using the middle two buttons below the screen. The set point temperature is indicated in the middle of the screen, while the room temperature will read directly above.
- Adjust the fan speed if desired by using the far-right button below screen. *Some models have a set speed which was preinstalled and cannot be changed.
- A/C and heat flows from the vents mounted in the ceiling once the “Mode” and “Set Point” has been set, if the room isn’t already up to temperature.

Please note the following:

The system will NOT run if the thermostats are calling for different modes. I.e., “Heat” in one room, and “Cool” in another. This only applies to the Mitsubishi system and does not interfere with the hydronic baseboard heaters.

Thermostat will have a higher temperature reading than the “PRO” thermostat located to the right, as it has different temperature sensing technology.