



# Heat Instructions

---

- Using the UP (+) or DOWN (-) arrows, adjust set point to desired room temperature which is located in the top right of the LCD screen.
  
- This system generates hydronic heat that radiates from the baseboard heaters. The room temperature will be displayed in the center of the screen in large text.